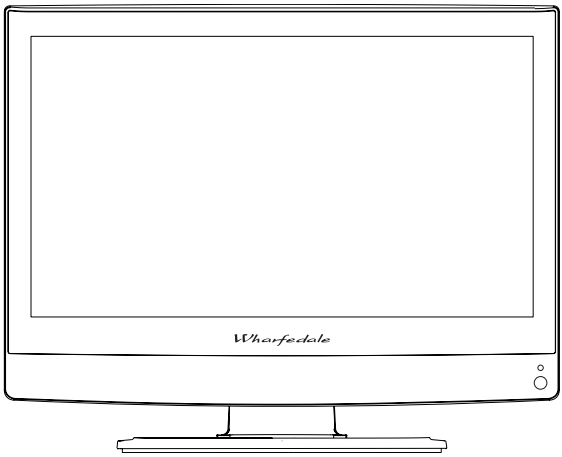

15”/19” HD READY LCD TV

User Manual

Wharfedale

CE

WELCOME

Thanks for buying this Wharfedale 15” or 19” LCD TV. This guide will help you set up and begin using your Wharfedale TV.

First, check the contents of your box with the parts checklist below:

- Wharfedale 15” or 19” LCD TV
- Remote control
- AA battery x2
- Audio cable

Now you can get started!

CONTENTS

WELCOME 2
IMPORTANT INFORMATION 4
SAFETY NOTICE 5
ELECTRICAL CONNECTIONS 6
GET TO KNOW YOUR TV CONTROLS 7
GET TO KNOW YOUR REMOTE CONTROL 8
CONNECTING YOUR TV 9
SETTING UP 12
TUNING YOUR TV 14
USING YOUR TV 15
ADJUSTING YOUR PICTURE AND AUDIO SETTINGS 17
SPECIFICATION 20
TROUBLESHOOTING 21
PRODUCT GUARANTEE 22

IMPORTANT INFORMATION

READ ALL INSTRUCTIONS BEFORE USE AND KEEP FOR FUTURE REFERENCE.

CAUTION

RISK OF ELECTRIC SHOCK, DO NOT OPEN.

Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

WARNING

- To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. Position where there is no risk of splashing or dripping of liquids. Do not place vases or any other objects filled with liquids on the unit.
- To avoid fire, no naked flame source, such as lit candles, should be placed on or around the unit.
- At least 10cm of space should be left around the apparatus for sufficient ventilation.
- The ventilation holes must be kept clear from obstructions.
- In case of smoke, or unusual noises or smells coming from the unit, switch it off, unplug it from the wall socket and contact your dealer or service centre.

SAFETY NOTICE

WARNING

For your protection, please read these instructions completely and keep this manual for future reference.

- Unplug the device from the wall socket when it is not being used for a long period of time. When there is lightning, unplug the unit from the wall socket immediately. Never touch the aerial cable during lightning.
- The device is not suitable for children to operate.
- To prevent damage or electrocution – do not push objects of any kind through the openings in this device.
- Unplug the device from the wall socket before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- Power supply cords should be routed safely to prevent damage to the cord.
- Place the TV in such a position that the screen is not exposed to direct sunlight. It is best to have soft indirect lighting while watching TV. Avoid dark environments and screen reflection as these may cause eye fatigue.
- When the TV has been moved from a cold place, it will need time for the moisture from inside to evaporate.
- Use an isolated power transformer during maintenance as the chassis of the device may be electrified.
- The mains plug is used for disconnecting the device and to make it easily accessible.
- Make sure the unit is connected to a mains socket which is earthed.

ELECTRICAL CONNECTIONS

CONNECTING TO POWER

Check that the voltage marked on the product corresponds with your supply voltage. This product is fitted with a BS plug complying with BS1363. If this plug is unsuitable or needs to be replaced, please note the following:

PLUG REPLACEMENT

If you need to replace the fitted plug.

WARNING

Never connect live or neutral wires to the earth terminal of the plug. Only fit an approved 13 Amp BS1363/A plug and the correct rated fuse. If in doubt, consult a qualified electrician.

IMPORTANT

The wires in this mains lead are coloured as follows:

Blue Neutral

Brown Live

As the colours of the wires in the mains lead of this apparatus may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

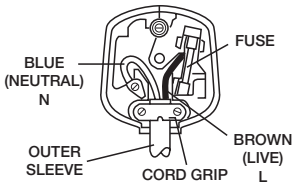

The wire which is coloured blue must be connected to the terminal, which is marked with N or coloured blue. The wire which is coloured brown must be connected to the terminal which is marked L or coloured brown. Always ensure that the plug cord grip is fastened correctly. If a 13A (BS1363) fused plug is used it must be fitted with a 3A fuse conforming to BS1362 and be ASTA approved. If in doubt, contact a qualified electrician.

WASTE ELECTRICAL PRODUCTS SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD WASTE. PLEASE RECYCLE WHERE FACILITIES EXISTS. CHECK WITH YOUR LOCAL AUTHORITY FOR RECYCLING ADVICE.

GET TO KNOW YOUR TV CONTROLS

FRONT

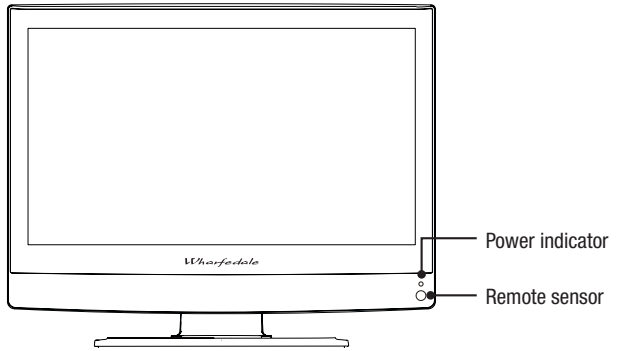

BACK (connections)

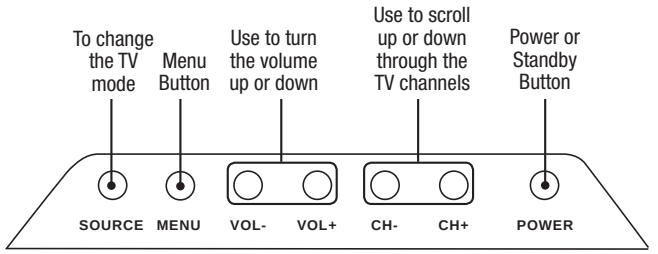

SIDE

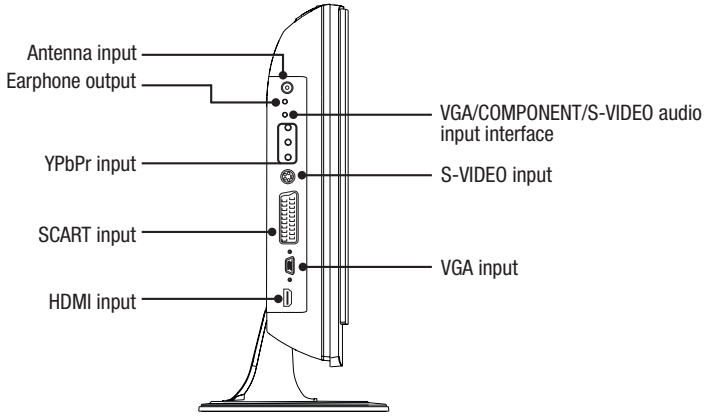

GET TO KNOW YOUR REMOTE CONTROL

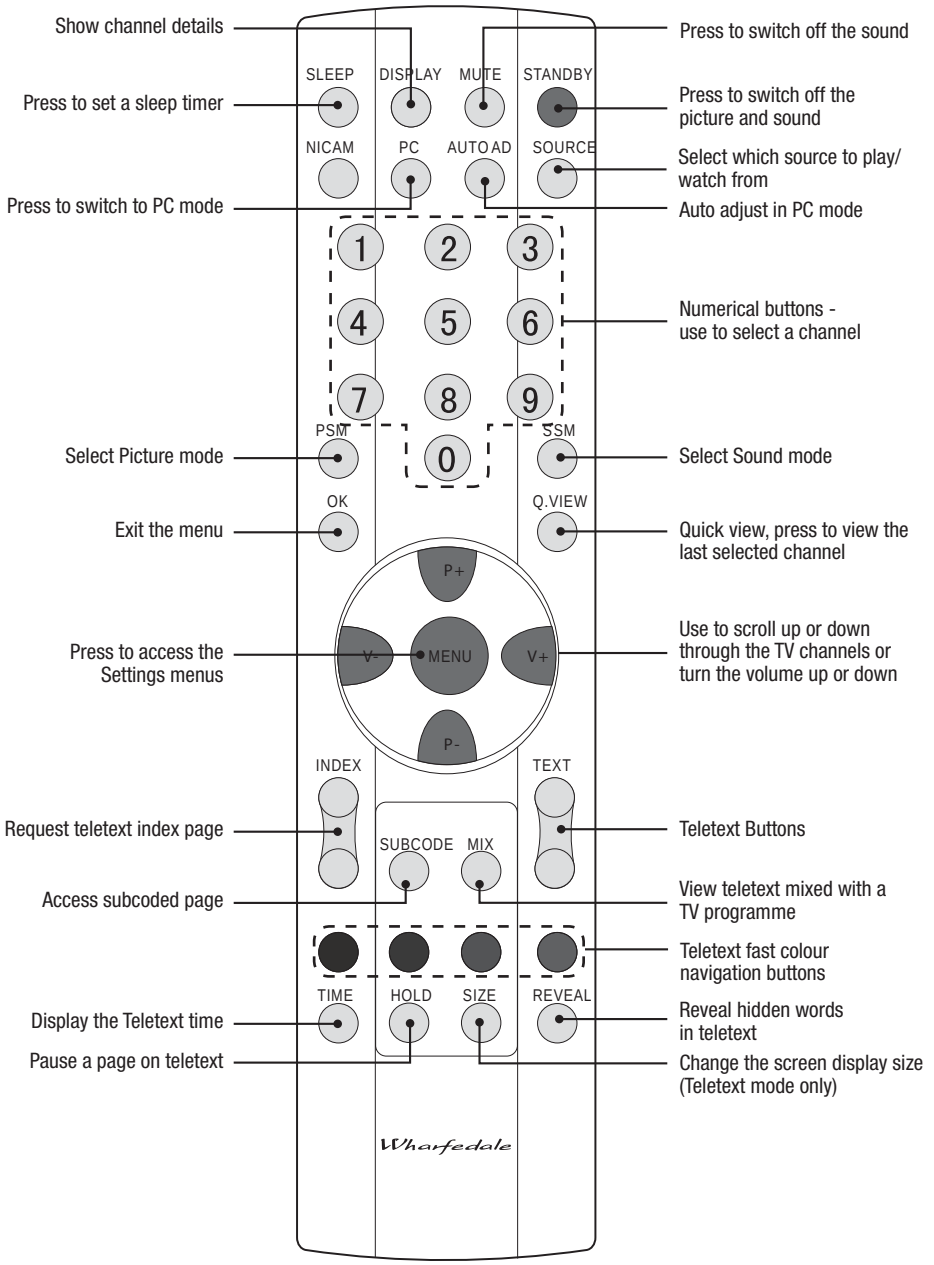

CONNECTING YOUR TV

ANTENNA CONNECTION

Connect your aerial to the TV as shown in the picture below:

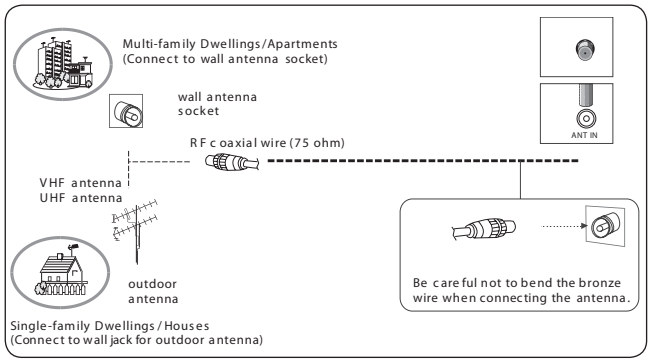
Multi-family Dwellings/Apartments
(Connect to wall antenna socket)
wall antenna socket
ANT IN
RF coaxial wire (75 ohm)
VHF antenna
UHF antenna
outdoor antenna
Be careful not to bend the bronze wire when connecting the antenna.
Single-family Dwellings/Houses
(Connect to wall jack for outdoor antenna)

IMPROVE YOUR SIGNAL

To improve picture quality in a poor signal area, use a signal amplifier (not supplied).

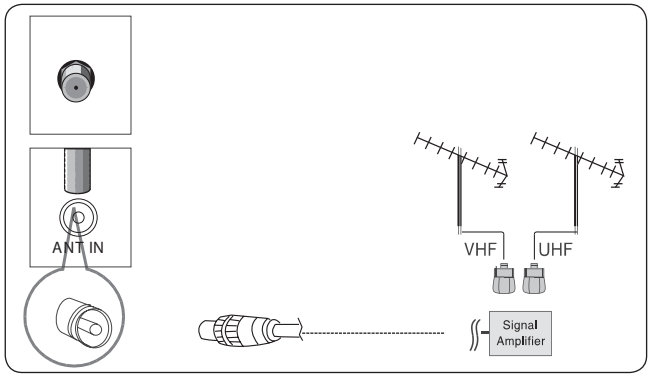

CONNECT YOUR PC TO THE TV

You can use your TV as a monitor for your personal computer by connecting it with a VGA cable (not supplied).

1 Read your computer user guide and check it has a VGA connector.

2 Turn the power off on your TV and PC.

3 Connect a D type 15-pin VGA interface cable to the VGA video interface connector on the PC. Connect the other end of the cable to the PC interface connector on the TV. Tighten the screws on the VGA connectors and connect the audio cable (not supplied) to the audio input socket on the back of the TV.

4 Turn on the power of the TV first and then the PC.

5 Press the **SOURCE** button on the TV or TV remote control to set the video input mode to PC.

6 Once the image shows, if there is noise present, change the PC mode to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the menu until the picture is clear.

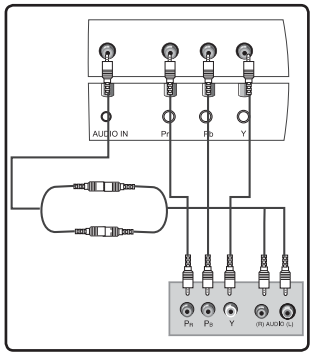

CONNECT A DVD PLAYER TO YOUR TV

Connect the DVD video outputs (Y, PB, PR) to the COMPONENT (Y, Pb, Pr) IN socket on your TV.

1 Turn on the DVD player and insert a DVD.

2 Press the **SOURCE** button to select **COMPONENT**.

3 Refer to the DVD player user guide for operating instructions.

CONNECT A VCR TO YOUR TV

There are two ways in which you can connect a VCR to your TV. Make sure that both the TV and VCR are switched off before you connect them.

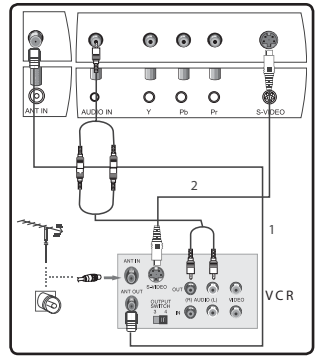

Connection Option 1

Connect the aerial cable as connection 1. Refer to the VCR manual for the settings instructions.

Connection Option 2

1 Connect the audio and S-VIDEO cables from the VCR output jacks to the TV input jacks.

2 Insert a video tape into the VCR and press PLAY on the VCR.

3 Turn on the power of the TV first, then the VCR.

4 Press the **SOURCE** button on the TV to set the video input mode to **SVIDEO**.

SCART INPUT

1 Connect the scart lead from the extrenal device (DVD player, Set-top box or games console) to the TV scart socket.

2 Press the SOURCE button to select scart mode.

3 Press the play button on the external device.

HDMI INPUT

1 Connect the cable from the HDMI device to the TV HDMI socket.

2 Press the **SOURCE** button to select **HDMI** mode.

3 Refer to the HDMI device user guide for how to operate.

MOUNT YOUR TV ONTO THE WALL (19" LCD TV ONLY)

You may be able to mount your TV onto the wall using a wall bracket (not supplied). Use 4 machine screws (M4 x 8mm) to screw the TV onto the bracket (not supplied). See the wall bracket user guide for instructions.

SETTING UP

LOCATION

You will need to place your TV near your plug socket (so the power cable can comfortably reach) and near your aerial lead.

CONNECTION

1 Insert your TV aerial lead into the Antenna input on the right edge of the TV.

2 Insert the three-pin plug at the end of the power lead into a wall socket.

3 Insert the batteries into the remote. Make sure they are inserted the right way around, matching the polarity as indicated inside the battery compartment.

BATTERY CAUTION

- Do not attempt to recharge, short-circuit, disassemble, heat or throw the batteries into a fire.
- Placing batteries with wrong or mixed polarities will result in damage to the batteries and/or may result in a malfunction of the unit.
- Do not mix old and new batteries.
- Dispose of batteries properly in accordance with local law.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

For details on how to attach other equipment to your TV see GET TO KNOW YOUR TV CONTROLS on page 7.

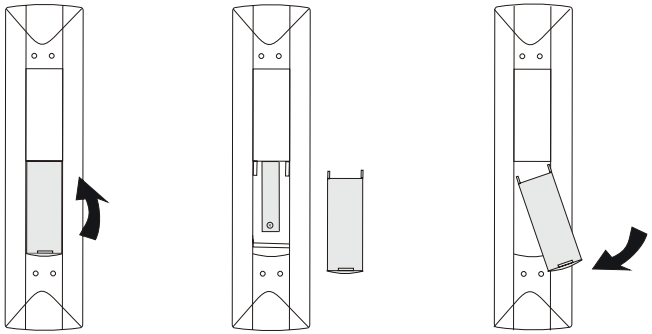

SWITCHING YOUR TV ON

1 Press the **POWER/STANDBY** button on the top of the TV or the **STANDBY** button on your remote control.

2 The TV will turn on and the red light in the bottom right corner will turn green. This may take a few moments.

3 The first time you switch on, a box will appear on screen asking if you'd like to **AUTO SEARCH** for channels. Press **P+/-** to select **YES** or **NO**, then press **MENU** to confirm. (see image 1) See page 14 to learn how to tune later.

4 The TV will automatically begin to search for channels. A progress bar will appear on screen and the search will take a few moments.

5 When the search is complete, **AUTO SEARCH** will shut and the TV channel saved to button 1 (this should be BBC1) will be displayed.

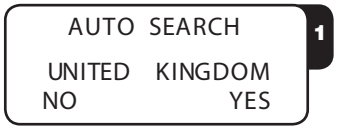

TUNING YOUR TV

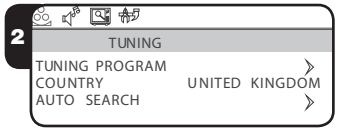

RETUNING YOUR TV AT A LATER DATE

1 Press **MENU**, then the **V+** button twice until the **TUNING** menu appears on screen. (see image 2)

2 Press the **P-** button so **AUTO SEARCH** is highlighted. Press the **V+** button to select.

3 The TV will automatically search for channels and save each one. The progress will be displayed on screen. Press **V+/-** to select YES, and press MENU to confirm.

4 When the search is complete, **AUTO SEARCH** will shut and the first TV channel found will be displayed.



MANUALLY SEARCHING FOR A CHANNEL

1 Select the channel number you want to manually tune a channel to.

2 Press **MENU**, then the **V+** button twice until the **TUNING** menu appears on screen.

3 Press the **P-** button so **TUNING PROGRAM** is highlighted. Press the **V+** button to select.

4 With the **P-** button, scroll down to MANUAL SEARCH. Press the **V+** button to select.

5 Use the **V+** and **V-** button to tune to the channel **UP** or **DOWN**. Press MENU to confirm. (see image 3)

NOTE: You can fine tune your channels by selecting the **FINE TUNE** option from the **TUNING** menu. Use the **V+** and **V-** buttons in the same way as you do when manually tuning.

SWITCHING TO AN EXTERNAL SOURCE OTHER THAN TV

If you have attached a DVD player or similar device to the TV, you'll need to tell the TV to display the content from it. Simply press **SOURCE** repeatedly to cycle through the options and stop when the required source name is displayed in the top right corner of the screen.

For details on how to plug in other equipment see GET TO KNOW YOUR TV CONTROLS on page 8.

USING YOUR TV

CHANGING THE CHANNEL

Change the channel by keying in the channel number of the station you want to watch using the numerical buttons.

Alternatively, use the **P+** and **P-** buttons to move consecutively through your channel list.

ADJUSTING THE VOLUME

Use the **V+** and **V-** buttons to turn the volume of your TV up or down.

Press **MUTE** to remove the sound altogether and simply press it a second time to switch the sound back on.

VIEWING THE DETAILS OF AN ANALOGUE CHANNEL

1 Press **MENU**, then the **V+** button twice until the **TUNING** menu appears on screen.

2 Press the **P-** button so **TUNING PROGRAM** is highlighted. Press the **V+** button to select.

3 Press the **V+** button repeatedly to cycle through the channels. The programme showing in the background will change as your move between channel details.

CHANGE THE ORDER OF YOUR CHANNEL LIST

1 Press **MENU**, then the **V+** button twice until the **TUNING** menu appears on screen.

2 Press the **P-** button so **TUNING PROGRAM** is highlighted. Press the **V+** button to select.

3 With the **P-** button scroll down to **EXCHANGE**. Press the **V+** button to select.

4 When you have highlighted **TO**, use the **V+** button to move the channel to the position you want to place the channel. For example, ITV1 may have tuned to button number four and you may want it to correspond to button number three. (see image 4)

5 When you have highlighted the new required position of the channel, scroll down with the **P-** button to **EXCHANGE** to go back to the previous menu.

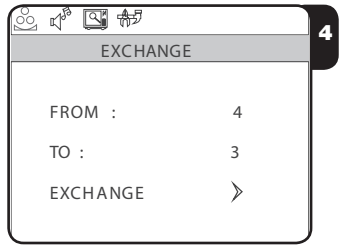

RENAMING A CHANNEL IN YOUR CHANNEL LIST

1 Press **MENU**, then the **V+** button twice until the **TUNING** menu appears on screen.

2 Press the **P-** button so **TUNING PROGRAM** is highlighted. Press the **V+** button to select.

3 Using the **P-** button, scroll down to **EDIT NAME**. Press the **V+** button to select.

4 Move the cursor through the characters of the existing name using the **V+** and **V-** buttons. Use the **P-** and **P+** buttons to change the letter or number.

5 Press **MENU** to store your changes.

SKIPPING A CHANNEL FROM YOUR CHANNEL LIST

1 Press **MENU** then the **V+** button twice until the **TUNING** menu appears on screen.

2 Press the **P-** button so **TUNING PROGRAM** is highlighted. Press the **V+** button to select.

3 With the **P-** button scroll down to **SKIP**. Press the **V+** button to select **ON**.

4 The TV will not stop on this channel anymore. If you want to re-include this channel, you just have to go back to the **SKIP** menu when you press the **CH+** or **CH-** button (but you can press the numeric buttons to select the channel) and select **OFF**.

ACCESSING AND USING TELETEXT

Teletext varies depending on what channel you are viewing when you access it. To access Teletext, press the ▤ button. Use the colour buttons to browse by section or use the Teletext number buttons to input a three-digit page number and go directly to it.

Other functions for the teletext mode are as follows:

MIX - Press this button to superimpose the teletext screen over the TV picture. Press a second time to return to the normal text mode.

INDEX - Press this button to go straight to the index page of teletext.

HOLD - Press this button to pause on the currently displayed page and stop teletext from automatically updating or scrolling.

SIZE - Press this button repeatedly to cycle through the screen size options for teletext. Choose from full screen, top half or bottom half.

REVEAL - Press this button to reveal hidden parts of text in Teletext quizzes.

ADJUSTING YOUR PICTURE AND AUDIO SETTINGS

CHANGING THE MENU LANGUAGE

1 Press **MENU**, then the **V+** button three times until the **FUNCTION** menu appears on screen.

2 Press the **P-** button to highlight **LANGUAGE** and then press the **V+** and **V-** buttons to scroll through the available languages.

3 The language of the menu will change as you scroll through. When you get to your preferred language, press **OK** to apply and exit the menu.

CHANGING THE PICTURE SETTINGS

1 Press **MENU** to open the main menu, the first page of which is the picture settings page.

2 Use the **P-** and **P+** buttons to scroll through the options. They are:
BRIGHTNESS, CONTRAST and **COLOUR** - Use the **V-** and **V+** buttons to select a level between 0 and 100. The picture will adjust as you change the level.
SHARPNESS - Use the **V-** and **V+** buttons to select a level between 0 and 4. The picture will adjust as you change the level.
NOISE REDUCTION - Choose one of the preset picture levels from: **OFF**, **LOW**, **MID** and **HIGH**.

3 Press **MENU** twice to apply your amended settings and exit the menu.

CHANGING YOUR AUDIO SETTINGS

1 Press **MENU**, then the **V+** button until the **AUDIO** menu appears on screen.

2 Use the **P-** and **P+** buttons to scroll through the options (see image 5). They are:
VOLUME, BALANCE, BASS, TREBLE - Use the **V-** and **V+** buttons to select a level between 0 and 100. The sound will adjust as you change the level.
AUDIO MODE - Choose one of the preset audio modes from: **VOICE**, **MUSIC**, **THEATRE**, **PERSONAL**.
AVL (AUTO VOLUME) - Use the **V-** and **V+** buttons to select **ON** or **OFF**.

3 Press **MENU** twice to apply your amended settings and exit the menu.

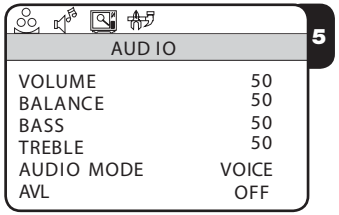

5

SETTING A SLEEP TIMER

The Sleep Timer allows you to set your TV to switch off automatically at a predefined time.

1 Press the **SLEEP** button repeatedly to cycle through the available times (the options are **0**, **15**, **30**, **45**, **60**, **90**, **120**, **180** and **240**).

2 After you have chosen the sleep timer, wait a few seconds until text disappears from the screen.

3 When the set time has expired, the TV will automatically turn off.

ADJUSTING FUNCTION SETTINGS

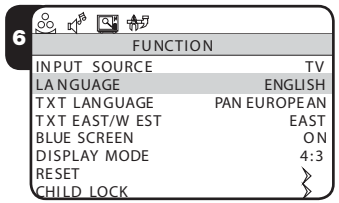

1 Press **MENU**, then the **V+** button until the **FUNCTION** menu appears on screen.

2 Scroll through the options using the **P-** and **P+** buttons (see image 6). They are:

INPUT SCREEN - Choose between **TV**, **PC**, **S-VIDEO**, **SCART**, **COMPONENT** or **HDMI**.
LANGUAGE - Change the language used by the menus.
TEXT LANGUAGE- Select between pan european, greek or cyrillic.
TEXT EAST/WEST- Select between **EAST** or **WEST**.
BLUE SCREEN - Choose either **ON** or **OFF**.
DISPLAY - Choose the size of the screen. Options are full screen, 16:9 or 4:3.
RESET – Press the **V+** button to install the original settings back.
CHILD LOCK - Press the **V-** button to access the **CHILD LOCK** menu.

ADJUSTING MENU OPTIONS

1 Press **MENU**, then the V+ button until the **ADJUST** menu appears on screen.

2 Scroll through the options using the **P-** and **P+** buttons. They are:

AUTO SYNC - Adjust the picture location frequency and phase settings.

PHASE - Remove any horizontal distortion and sharpen the display.

CLOCK - Update the clock.

H.POSITION - Adjust the horizontal picture position.

V.POSITION - Adjust the vertical picture position.

USING THE CHILD LOCK FUNCTION

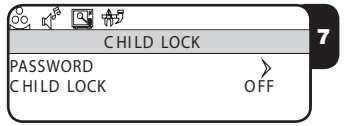

1 From the **FUNCTION** menu, choose **CHILD LOCK**. Enter the four-digit password which is factory set to 0000.

2 The **CHILD LOCK** menu will open.

3 Scroll through the options using the **P-** and **P+** buttons (see image 7). They are:

PASSWORD - Input your new password. When you have entered the four digits you will be prompted to enter them again. Your new password will then automatically be saved.

CHILD LOCK - Use the **V-** and **V+** buttons to select **ON** or **OFF**.

SPECIFICATION

Specifications of the television that you have just purchased may vary from the information in this table due to technical innovations.

Model	L1511W-A	L1911W-A
Picture, sound system	PAL/SECAM-B/G,D/K,I,L/L'	
Audio output	≥1.5W+1.5W	
External input port	COMPONENT input, PC input, S-VIDEO input, Audio input, Headphone output, SCART, Antenna input, HDMI input	
Power requirements	~150-240V 50/60Hz	
Power consumption	≤50W	≤60W
Temperature	Working: 5°C – 35°C Storage: -15°C – 45°C	
Humidity	Working: 20% – 80% Storage: 5% – 90%	
Accessories	Remote control Batteries Owner's manual Audio cable	

NOTE

All specifications are subject to change without notice.
All qualities are approximate values.

TROUBLESHOOTING

To assist in locating possible faults, use the help guide below.

Problem	How to solve the problem
No picture, no sound	Check the television has been properly plugged in. Check the television has a proper supplied power source. Check electricity is available.
Blank screen	Check the signal inputs. Press the **SOURCE** button to change signal input to TV input. Restart the television if power supply is interrupted.
No sound	Press the **MUTE** button and see if Mute mode is set. Switch to another channel and see if the same problem occurs. Press the **VOL+** button to see if the problem can be solved.
Poor sound	Check if the sound system is correct. Refer to the user guide to adjust.
No picture in some channels	Check if the correct channel is selected. Adjust the antenna. Make adjustments by **FINE TUNE** and **MANUAL SEARCH**.
No colour for some channels (black & white)	Check if the same problem exists in other channels. Check out the picture and sound systems. Refer to the user guide for colour adjustment.
Spots with some or all pictures	Check if the antenna is correctly connected. Check if the antenna is in good condition. Make fine adjustment of channel.
Television out of control	Disconnect the television from the power supply and 10 seconds later, re-connect the television to the power supply. If the problem still exists, contact authorised after-sales service for technical assistance.

NOTE

1 If the fault cannot be repaired using the above guide, consult your local authorised service centre.

2 The TV set must only be repaired by a qualified registered service person. Never attempt to remove the back cover as the TV set has dangerous voltages inside that may cause a fatality or fire.

PRODUCT GUARANTEE

Wharfedale

This product is guaranteed against manufacturing defects for a period of

1 Year

This does not cover the product where the fault is due to misuse, abuse, use in contravention of the instructions, or where the product has been the subject of unauthorised modifications or alterations, or has been the subject of commercial use.

In the event of a problem with the product within the guarantee period please call the customer helpline on 0845 604 0105. If the item is shown to have had an inherent defect present at the time of sale, Argos will provide you with a replacement.

Your statutory rights remain unaffected.

Guarantor; Argos Ltd
489 - 499 Avebury Boulevard
Central Milton Keynes
MK9 2NW